

Cleaning to Prevent Errors



EZ Printer/Copier/Fax Cleaner Sheet

K2-PCFF5

This product is designed to remove built-up paper flash and contaminants from multiple types of printers, copiers, and fax machines. Once inserted it will:

- Clean dirt and other contaminants
- Clean feed rollers

Use as:

- A scheduled maintenance product to prevent poor printing
- An emergency maintenance product to correct poorly printed material

50% IPA

Printer/Copier/Fax Cleaner Sheet

SAFE • QUICK • EFFICIENT
Use whenever you change toner or ink cartridges
Easy to use – sheets run through paper path
Pre-Moistened with 50% IPA Cleaning Solution

- Removes dirt, debris and label adhesives
- Cleans rollers
- Helps extend toner and ink cartridge life

Preventative Maintenance Schedule

Usage	Clean Every
Heavy	2 weeks
Medium	4 weeks
Light	8 weeks

Sheet may not appear dirty after use. Paper dust, oils and other foreign matter carried into your equipment cannot be easily seen on the sheet. It is the removal of this material that improves image quality. Sheet is also designed to help correct output problems and minimize equipment downtime. To avoid re-depositing debris in equipment, use each sheet only once.

50% IPA

Laser Printers:
Before opening pouch, determine how to print a blank page on your printer. If your software does not allow blank page printing, put a carriage return or period (.) in the blank document you are printing.

Inkjet Printers, Bubble Jet Printers:
Place a cleaning sheet in the paper tray or manual feed section of your printer. Print or form feed a blank page. If you are unable to "print" a blank page, try putting a character in a word processor document and then print it.

Dot Matrix Printers:
Remove ribbon cartridge and paper. Unfold sheet and position it in printer or typewriter as you would a normal sheet of paper. Print a page of text. Printing Tips: Perform a printer self-test or print a document from a program. To clean platen: Re-insert sheet, firmly grip both ends together (to prevent movement) and rotate platen knob. Platen will spin against sheet. Dispose of sheet.


Fax Machines:
Place sheet in document feed and press copy button. For fax print path cleaning, place cleaning sheet in paper tray, insert blank paper into document feed and press copy button.

Copiers:
Place sheet in the paper tray and make a blank copy.

If you experience a mis-feed or jam. Although we have tried to accommodate as many of the wide variety of machines on the market as possible, some machines may experience a feed problem. We have found that the following suggestions clear up most of these problems.

- Make certain sheet is fully extended and inserted into feed position.
- Always leave at least one sheet of paper in bottom of paper tray before using sheet.
- If sheet does not feed from the manual position, try feeding from the paper tray.
- If the sheet jams, run it upside down.

US patent # 5,227,226 Caution: Flammable. Contains 50% Isopropyl Alcohol

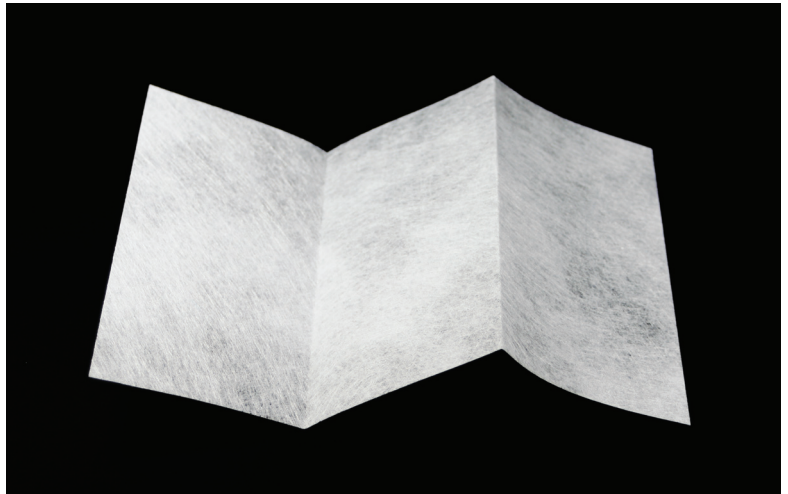

How Cleaning Cards Work

Transaction devices, such as card readers and thermal printers, need to be maintained for performance reliability. Cleaning cards safely and easily remove dirt and other contaminants from within these devices without costly outside assistance. Each transaction device requires specific cleaning products to be used as preventive or corrective maintenance.